VERBINDUNGSANLEITUNG KUNSTSTOFFTRANSPORTBÄNDER

WELDING INSTRUCTION PLASTIC BELTS

Bandtype PVC 35/9 R

Schweißtemperatur °C/ welding temperature °C	161
Schweißdruck bar/ welding pressure bar	1
Pressenbelag oben/ Top press covering	grobes PTFE / PTFE textured
Pressenbelag unten/ Bottom press covering	grobes PTFE / PTFE smooth

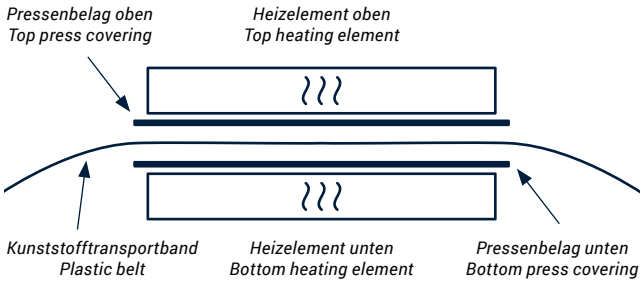

Allgemeine Hinweise

1. Wir empfehlen grundsätzlich eine diagonale Verbindung (60°). Nur bei ungünstigen Platzverhältnissen sollte eine rechtwinklige (90°) Verbindung durchgeführt werden.
2. Material entsprechend dem Verbindungswinkel zuschneiden
3. Im Verbindungsbereich die Finger ausstanzen.
4. Finger zusammenfügen und mit Gewichten fixieren.
5. Die Verbindung mittels Wärme (Lötkolben) heften.
6. Die Verbindung mit den oben angeführten Parametern verschweißen

General information

1. Use a diagonal splice wherever possible (60°). Only under unfavourable conditions a right angled splice (90°) should be made.
2. Cut the belt according to the splicing angle
3. Punch the fingers
4. Minimize the space between the fingers and fix the belt with weights.
5. Prefix the joint by heating with a soldering iron.
76 Join the belt in consideration of above mentioned welding parameter.

Stand/Date: 19.08.2024

www.maertens.de

MÄRTENS
Tradition and innovation since 1929